

Carodoor

User instruction for Central locking system connection

EN

- 1 Unlock the vehicle.
- 2 You have 4 minutes to activate the lift before it loses power.
- 3 If the time has run out and the lift is powerless, unlock the vehicle again or use the lift's wired hand control to activate the system.



The 4 minute countdown is from version 3.2 of the circuit board. Earlier versions have a 1 minute countdown