BraunAbility

Standard Lockable

A lightweight, secure, and easy-to-operate seat fixture

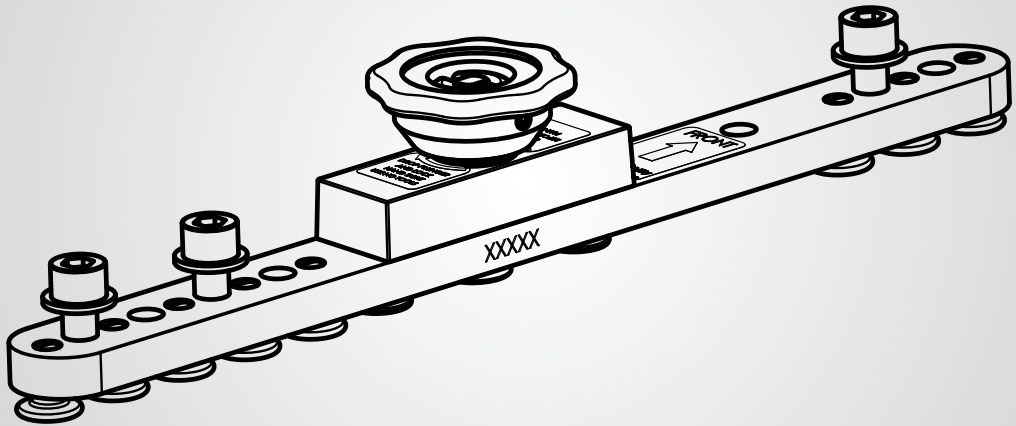

EN Installation and user manual

EN

Thank you for choosing a

Standard Lockable from BraunAbility!

The following manual is an important part of the product, providing you with information on how to achieve maximum performance and safe operation. Keep the manual in a safe place so that you can refer to it when necessary.

Indicates a warning for a situation in which damage, body injury or death could result if the warning is ignored.

If you have any questions about your adaptation, please contact your installation engineer. If you want to know more about us and our range of car adaptation solutions visit *www.braunability.eu*.

Once again, thank you for placing your confidence in our products!

This product is designed for a specific purpose and should be used accordingly. Any other use is not recommended and may compromise the safety of the product user.

Safety

6 Standard Lockable

Installation

7 Fitting the Standard Lockables to the seat legs

Operation

9 Fixing the seats into the rails
10 Removing the seat from the rails
10 Care instructions

Safety

Standard Lockable (SL)

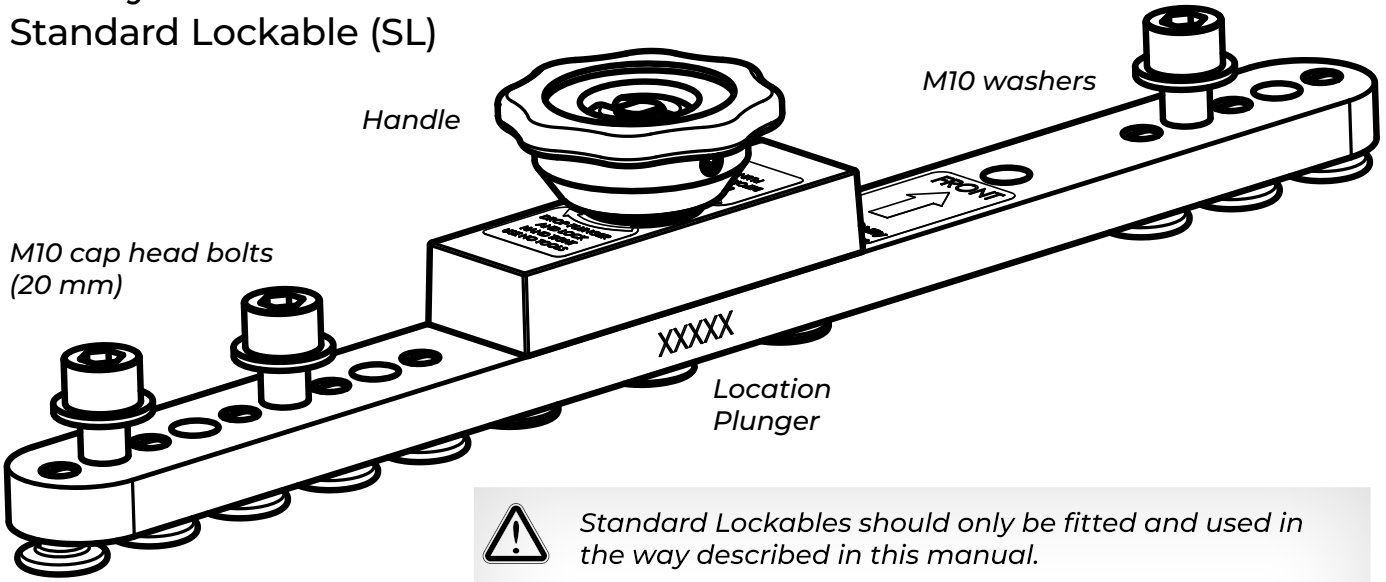

Standard Lockables should only be fitted and used in the way described in this manual.

The installer is responsible for ensuring that the assembly (seats, seatlegs and the Standard Lockables) complies with the applicable directives.

Standard Lockables have been approved by TÜV to meet M1 requirements for single seats up to 30 kg, and the requirements of ECE R14.

Installation

Fitting Standard Lockables to seat legs

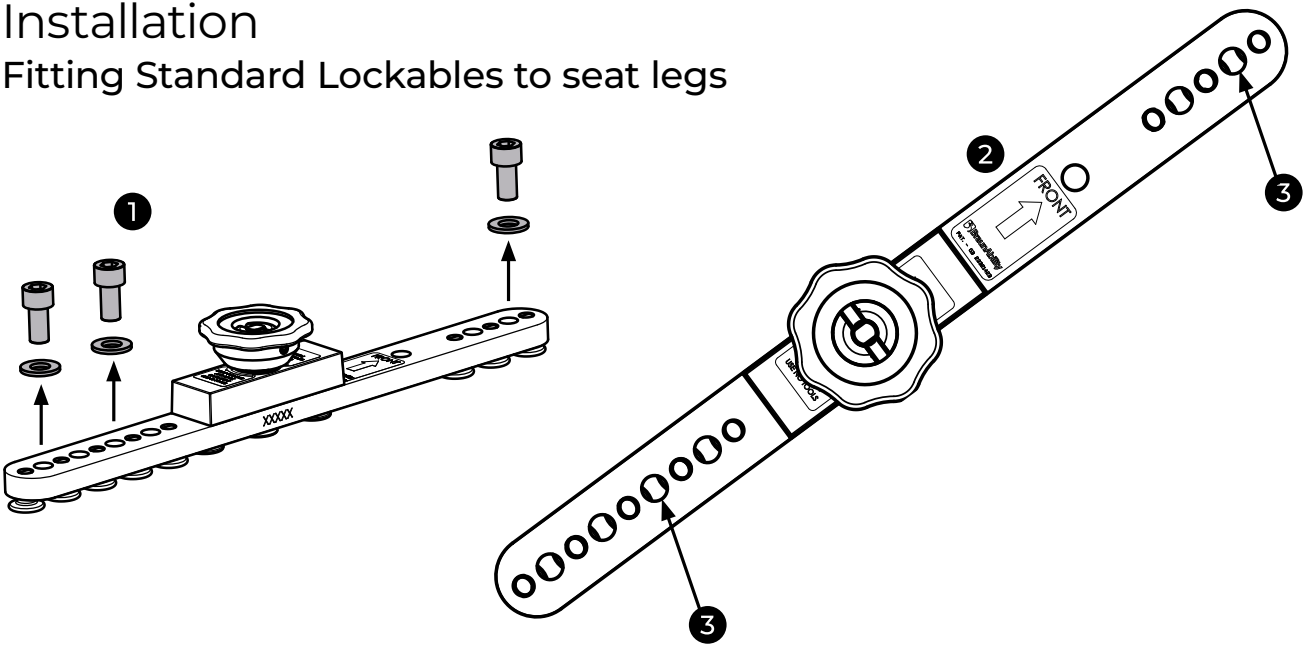

1 Remove the bolts and washers from each Standard Lockable.

2 Place the seat legs on the Standard Lockable. The arrow marked FRONT has to point towards the front of the seat.

3 Mount the seat legs as far forward as possible. Use at least two fixing holes of each Standard Lockable, one at the front and one at the rear.

Installation

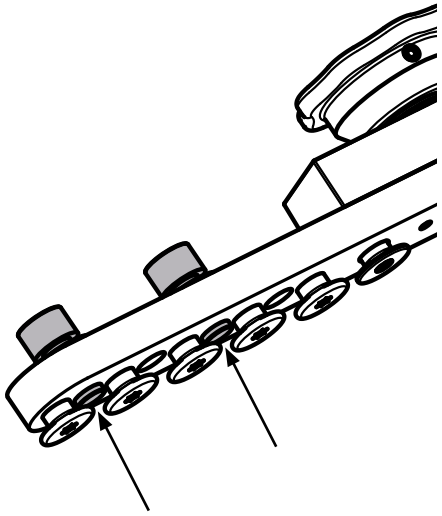

4 The fixing bolts must protude beyond the base of the Standard Lockable, without making contact with the top of the feet.

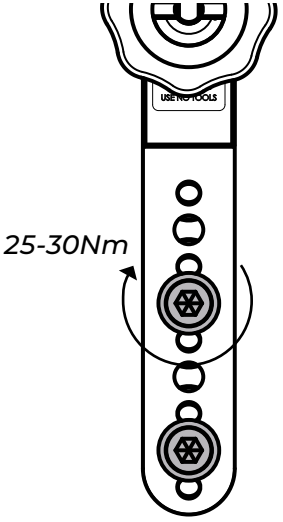

5 A tightening torque of 25-30 Nm (18-22lbft) is recommended.

If the the Standard Lockables fitted to the seat legs can not move freely in the rails:

Loosen off the fixing bolts in turn until the lockable and seat leg assembly moves freely in the rail.

Fill the gap between the top of the lockable and the bottom of the seat leg foot with a washer of the appropriate thickness.

Retighten the bolts to the correct torque, and check for free movement of the assembly in the rail.

Operation

Fixing the seat into the rails

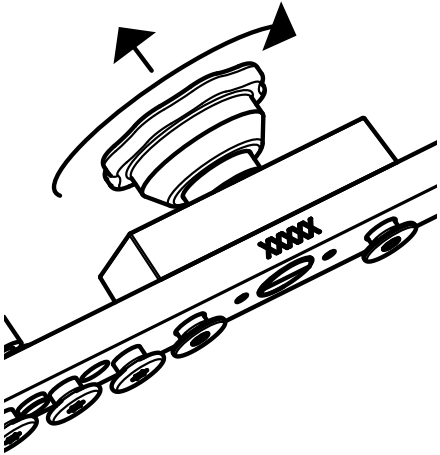

1 Turn the black handles anti-clockwise until a positive stop is reached. Lift the handles and turn 90° to raise the plunger.

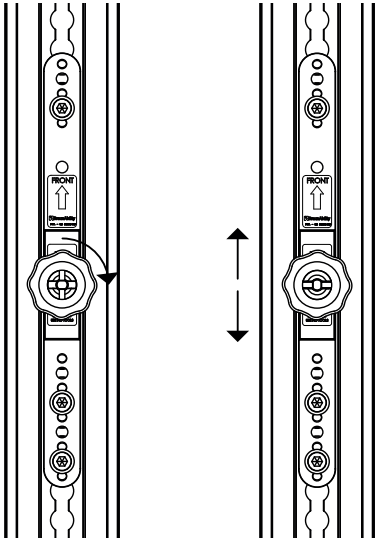

2 Fit the Standard Lockables into the rail and turn the black handles so they drop into slots. Push the seat backward or forward slightly until the plungers drop to the bottom of the slots.

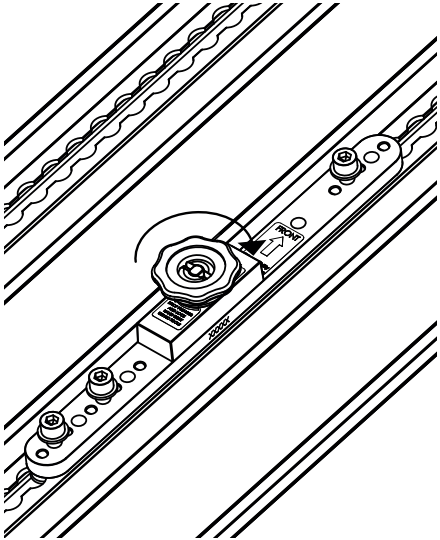

3 Turn the black handle clockwise to apply the “anti-rattle” mechanism.

Tighten by hand only. Do not use tools.

Operation

Removing the seat from the rails

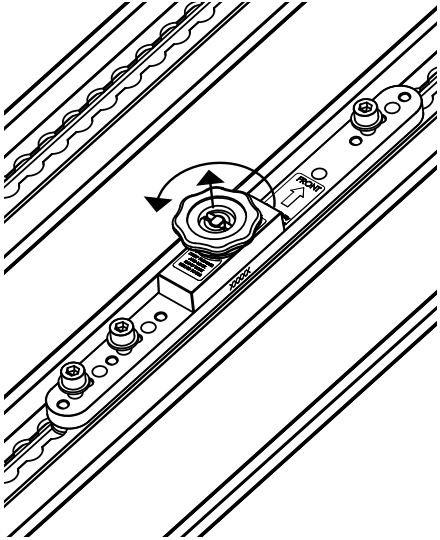

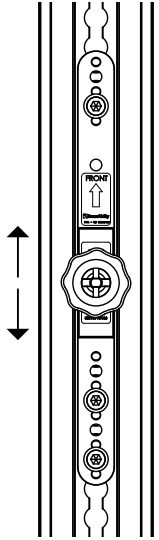

1 Turn the black handle anti-clockwise until a positive stop is reached. This is the unlocked position. Lift the black handle and turn 90° to raise the plunger.

2 Lift seat out of the rail with a slight backward or forward movement, to allow the seat lockable feet to clear the rail cut-outs.

Care instructions

Regularly inspect the Standard Lockables for damage, wear or malfunction. If any problems are identified replace immediately.

BraunAbility Europe AB, Stenkullen, Sweden is accredited by SWEDAC as testing laboratory in accordance with ECE R14 and ECE R145.

BraunAbility Europe AB is certified in accordance with ISO 9001:2015 and ISO 14001:2015

Illustrations, descriptions and specifications in the user manual are based on current product information.
BraunAbility Europe AB reserves the right to make alterations without previous notice.
© 2026 BraunAbility Europe AB

427993-2 2026/09

BraunAbility Europe AB
Åkerivägen 7
443 61 Stenkullen
Sweden

Phone: +46 302 254 00
E-mail: info@braunability.eu
www.braunability.eu